

E31xY63



HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Follow safe electrical work practices. See NFPA 70E in the USA, or applicable local codes.
- This equipment must only be installed and serviced by qualified electrical personnel.
- Read, understand and follow the instructions before installing this product.
- Turn off all power supplying equipment before working on or inside the equipment.
- Use a properly rated voltage sensing device to confirm power is off.
- DO NOT DEPEND ON THIS PRODUCT FOR VOLTAGE INDICATION
- Only install this product on insulated conductors.

Failure to follow these instructions will result in death or serious injury.

NOTICE

- This product is not intended for life or safety applications.
- Do not install this product in hazardous or classified locations.
- The installer is responsible for conformance to all applicable codes.
- Mount this product inside a suitable fire and electrical enclosure.

FCC PART 15 INFORMATION

NOTE: This equipment has been tested by the manufacturer and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference in which case the user will be required to correct the interference at his own expense. Modifications to this product without the express authorization of Veris Industries nullify this statement.

PRODUCT IDENTIFICATION

Description

E31  Y63

- A = Advanced board
- B = Intermediate board
- C = Basic board

E31xY63

Panelboard Monitoring System

Installer's Specifications

Inputs:

Input Power 90-277VAC, 50/60 Hz

Accuracy:

Power/Energy IEC 62053-21 Class 1, ANSI C12.1-2008

Voltage $\pm 0.5\%$ of reading 90-277V line-to-neutral

Operation:

Sampling Frequency 2560 Hz

Update Rate 1.8 seconds (both panels)

Overload Capability 22 kAIC

Outputs:

Type Modbus RTU

Connection DIP switch-selectable 2-wire or 4-wire, RS-485

Address DIP switch-selectable address 1 to 247 (in pairs of 2)*

Baud Rate DIP switch-selectable 9600, 19200, 38400

Parity DIP switch-selectable NONE, ODD, EVEN

Communication Format 8-data-bits, 1-start-bit, 1-stop-bit

Termination 5-position depluggable connector (TX+ TX- SHIELD TX+/RX+ TX-/RX-)

Mechanical:

Ribbon Cable Support 4 ft. (0.9 m) flat ribbon cable ships standard; up to 20 ft. (6 m) available

Environmental:

Operating Temperature Range 0° to 60°C (32° to 140°F) (<95% RH noncondensing)

Storage Temperature Range -40° to 70°C (-40° to 158°F)

Altitude of Operation 3000 m

Agency Approvals UL508, EN61010

* See Configuration section for details.

TABLE OF CONTENTS

Quick Install	2
Operation	2
Dimensions	2
Product Diagram	3
Data Output	3
Blink Codes for Status LED	3
Solid-Core CT Accuracy	3
Installation	4
Wiring	6
Configuration	7
Default DIP Switch Settings	7
Address Setup	8
Commissioning	9
Recommended Accessories	9
Safety	9
Troubleshooting	10
China RoHS Compliance Information IEFUP Table)	10

QUICK INSTALL



Observe precautions for handling static sensitive devices to avoid damage to the circuitry that is not covered under the factory warranty.

1. Disconnect and lock out power. Use a properly rated voltage sensing device to confirm power is off.
2. Mount the main acquisition board and adapter boards in the electrical enclosure.
3. Connect current transducers to the adapter boards.
4. Snap current sensors onto the conductors to be monitored. **Note: ensure that each split-core CT is closed and firmly seated.**
5. Secure wires using strain relief cable ties.
6. Configure communication and addressing parameters using DIP switches.
7. Wire RS-485 communications.
8. Connect CTs to the auxiliary inputs and connect them onto the main conductors in the enclosure (optional).
9. Wire control power and voltage taps (E31AY63 and E31BY63 only).
10. Download the free E3x configuration tool from www.veris.com to commission the device for operation.

OPERATION

The E31xY63 model includes a main circuit board and two adapter boards mounted to a single plate, with custom designed flat ribbon cables connecting the main board to these two adapter boards. Up to 42 split-core CTs (50A 100A, or 200A, sold separately) allow the E31xY63 to monitor up to 42 branch circuits. Each conductor passes through a current sensor and terminates at the breaker. Each sensor transmits the current data to the data acquisition board.


The E31xY63 can be expanded to monitor 84 branch circuits by adding two additional adapter boards, two ribbon cables, and 42 additional split-core CTs. However, these parts must be purchased and mounted separately. When fully equipped, the E31 system measures the current, voltage, and energy consumption of up to 92 circuits (84 branch circuits, 2 3-phase mains, 2 neutrals) with eight auxiliary inputs on a single board. One E31 system can monitor up to two panels.

Data is transmitted using an RS-485 Modbus protocol. The data acquisition board requires two addresses, one for each set of 42 current sensors and four auxiliary inputs. Data is updated roughly every two seconds. As a circuit approaches the user-defined threshold, the E31 activates the alarm indicators.


The E31A measures both current and power for the mains and branch circuits. The E31B measures both current and power for the mains, and current only for each branch circuit. The E31C measures current only for the mains and branch circuits.

DIMENSIONS

Circuit Board and Mounting Bracket

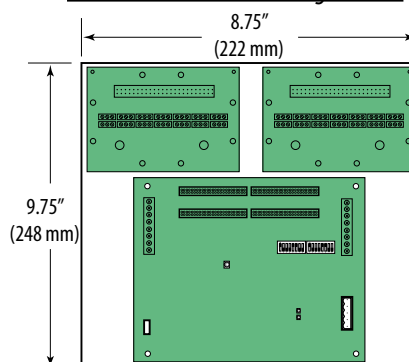


Current Sensors (sold separately)

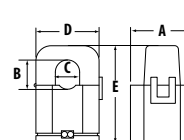


50 Amp

A = 1.0" (26 mm)
B = 0.5" (11 mm)
C = 0.4" (10 mm)
D = 0.9" (23 mm)
E = 1.6" (40 mm)

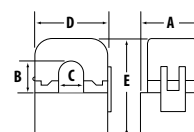

100 Amp


A = 1.2" (29 mm)
B = 0.8" (20 mm)
C = 0.7" (16 mm)
D = 1.6" (40 mm)
E = 2.1" (53 mm)

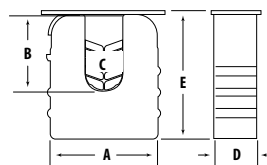

200 Amp

A = 2.6" (66 mm)
B = 1.1" (28 mm)
C = 0.8" (19 mm)
D = 2.9" (74 mm)
E = 3.5" (90 mm)

PRODUCT DIAGRAM

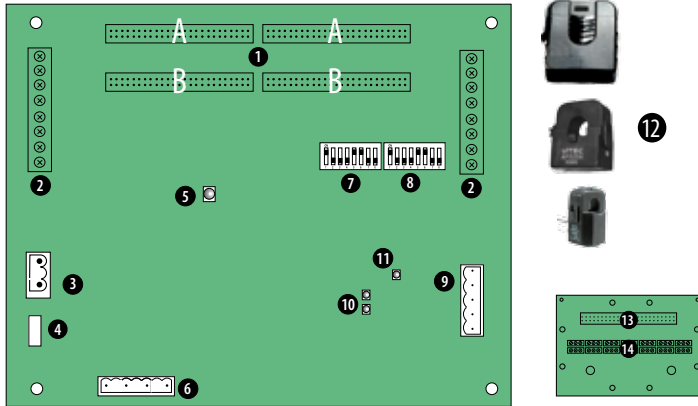

- 50-Pin Ribbon Cable Connectors:** Ribbon cables attach here for easy connection of adapter boards to the data acquisition board. The two connectors on the left are for panelboard 1; the two on the right are for panelboard 2.

Note: Connect Adapter Boards A and B to the correct ribbon cable connectors for each panel. The top connector is for Adapter Board A, and the bottom connector is for Adapter Board B.

- Auxiliary Inputs:** These 0.333VAC inputs are used for monitoring the main breaker or other high amperage source. Inputs on the left are for panelboard 1; inputs on the right are for panelboard 2.
- Control (Mains) Power Connection:** Easy 2-wire 90-277 VAC 50/60 Hz connection.
- Control Power Fuse:** 600VAC, 500mA time lag, factory-replaceable.
- Alive LED:** Red/green/amber LEDs. Blink codes are on page 3.
- Voltage Taps:** 1, 2, or 3 phase plus neutral connections. For voltage sensing and power calculations (no voltage taps on the E31C). Voltage taps are shared by both panels.
- Communications Address DIP Switch:** Each Modbus device must have a unique address. Switches are binary weighted. Left-most switch has a value of 1; right-most switch has a value of 128. Note: switches set the address for panel 1; panel 2 is automatically set to (Panel 1 address + 1). See Configuration section for details.
- Communications Settings DIP Switch:** Configures baud rate, parity, 2- or 4-wire communications.
- RS-485 Connection:** Used for Modbus serial communications. The Universal plug accommodates 2 or 4 wire connections.
- RS-485 LEDs:** The RX LED (closest to DIP switches) indicates the RS-485 is receiving information; the TX LED indicates transmission of information.
- Power LED:** Indicates power to main board
- Branch Current Sensors:** Each split-core current sensor is capable of monitoring conductors rated up to a maximum of 50, 100, or 200 amps. Up to 84 sensors can be purchased with the E31 (see Recommended Accessories on page 9). One of each style is pictured here. All CTs are sold separately.
- Ribbon Cable Connection**
- CT Terminal Connections**

DATA OUTPUT

Monitoring at Mains	E31A	E31B	E31C
Current per phase	■	■	■
Max. current per phase	■	■	■
Current demand per phase	■	■	■
Max. current demand per phase	■	■	■
Energy (kWh), total	■	■	
Real Power (kW) per phase	■	■	
Apparent Power (kVA)	■	■	
Power factor, total *	■	■	
Power factor, per phase	■	■	
Voltage, L-L and average of 3 phases	■	■	
Voltage, L-N and average of 3 phases	■	■	
Voltage, L-N and per phase	■	■	
Frequency (phase A)	■	■	
Monitoring at Branch Circuit			
Current	■	■	■
Max. current	■	■	■
Current demand	■	■	■
Max. current demand	■	■	■
Real power (kW)	■		
Real power (kW) demand	■		
Real power (kW) demand max.	■		
Energy (kWh) per circuit	■		
Power factor	■		
Apparent Power (kVA)	■		
Modbus Alarms			
Voltage over/under	■	■	
Current over/under	■	■	■

* Based on a 3-phase breaker rotation.

BLINK CODES FOR STATUS LED

Color and Pattern	Status Description
Green, once per second	Normal operation
Amber, once per second	Volts or Amps clipping
Amber, twice per second	Invalid firmware image
Red, solid or blink	Diagnostic event detected

SPLIT-CORE CT ACCURACY

	50A Split-Core CT	100A Split-Core CT	200A Split-Core CT
Voltage Rating	300VAC	600VAC	600VAC
Accuracy	±1%	±0.5%	±1%
Temperature	0° to 60°C	0° to 60°C	0° to 60°C
Agency	UL508 recognized, EN61010	UL508 recognized, EN61010	UL508 recognized, EN61010

INSTALLATION




Observe precautions for handling static sensitive devices to avoid damage to the circuitry that is not covered under the factory warranty.



Disconnect power to the electrical panel and lock it out.


1. Connect current sensors to the terminals on the adapter boards (Figure 1).

Figure 1

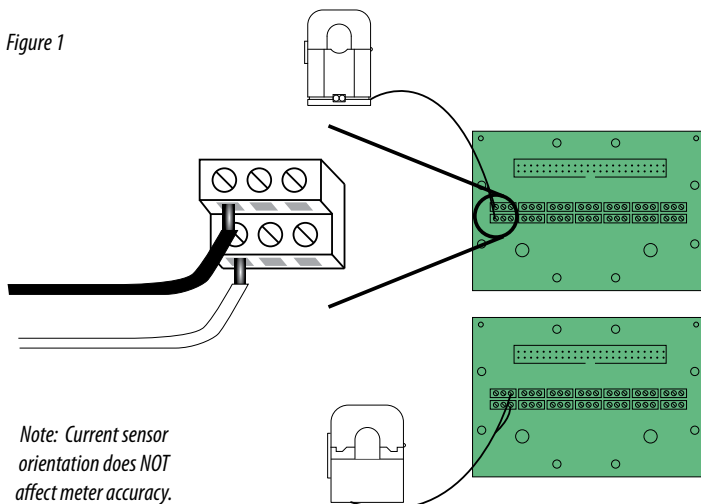


2. Install the current sensors onto the conductors to be monitored (Figure 2). Sensors can be mounted facing either direction; orientation does not affect meter accuracy. Note: Clean split-core contacts before closing. The hinge can detach, allowing the base and the top to separate for easier cleaning and installation.

Figure 2

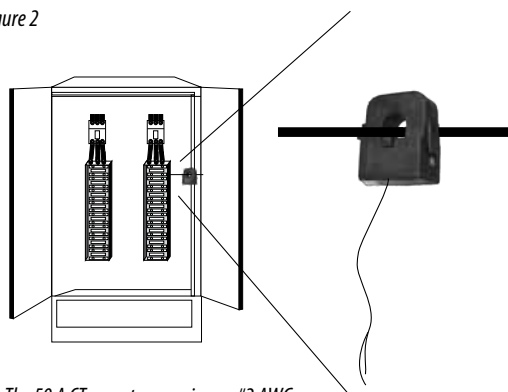


The 50 A CT accepts a maximum #2 AWG (0.384" O.D.) wire with THHN insulation.
The 100A CT accepts a maximum 3/0 AWG (0.584" O.D.) wire with THHN insulation.
The 200A CT accepts a maximum of 350 MCM wire with THHN insulation.
Use this gauge wire or smaller for each circuit.

Close CTs until the clasp clicks into place to ensure that contact surfaces are firmly seated.

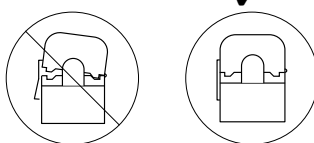

3. Plastic cable ties are included with the product for strain relief. Insert the strain relief device into one of the available holes on the adapter board (Figure 3A). Gather all current sensor wires connected to that adapter board and secure the cable tie around them (Figure 3B).

Figure 3

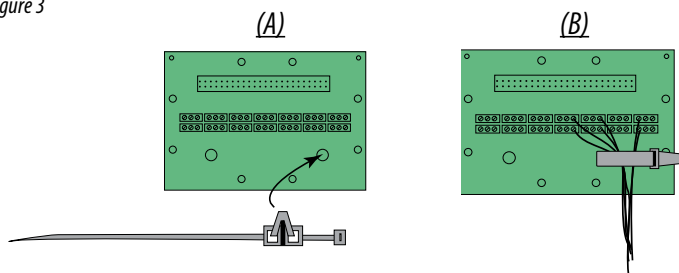

4. The adapter boards are silk screened with two rows of numbers. For applications that require odd/even branch circuit numbering, use the row designated ODD or EVEN. For applications that require sequential numbering, use the number row marked SEQ (Figure 4).

Figure 4

BLACK																																																																																																																																																																																																																																																																																																																																																																																																																																															</
-------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	----

Adapter Board A numbering:


ODD	1	3	5	7	9	11	13	15	17	19	21	23	25	27	29	31	33	35	37	39	41																						
SEQ	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1																						

BLACK																																																																																																																																																																																																																																																																																																																																																																	<
-------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	---

Adapter Board B numbering:


EVEN	2	4	6	8	10	12	14	16	18	20	22	24	26	28	30	32	34	36	38	40	42																						
SEQ	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42																						

Figure 5

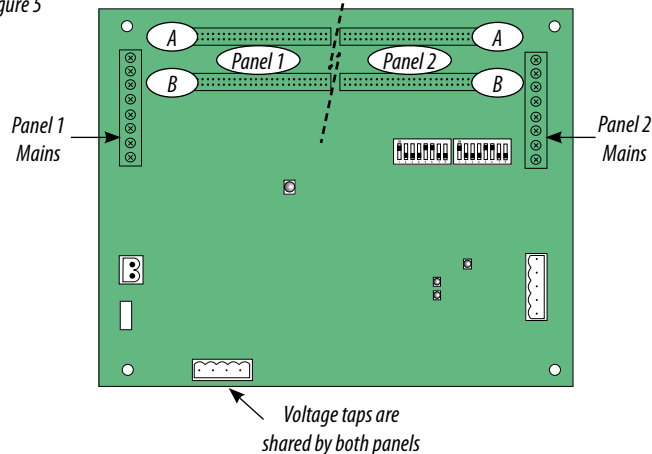

Panel 1 uses base Modbus address as set by DIP switches.
Panel 2 uses base + 1 Modbus address as set by DIP switches.

5. Configure communication and addressing parameters using DIP switches. The E31 requires two addresses, one for each set of 42 current sensors and four auxiliary inputs. See the Configuration section for more information.
6. Wire RS-485 communications (see diagrams in Wiring section).
7. Connect 0.333VAC current transducers (CTs) to the main conductors by snapping CTs around lines, observing local codes regarding bending radius (optional; Figures 6, 7).

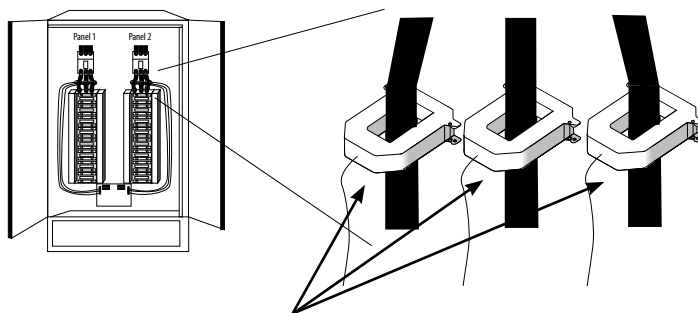
Figure 6


Recommended CT:

Veris Industries H6810, H6811, H6812 Series with 0.333VAC output.

Available in 100A max. to 2400A max.

Call a Veris sales rep if higher amperages are required.

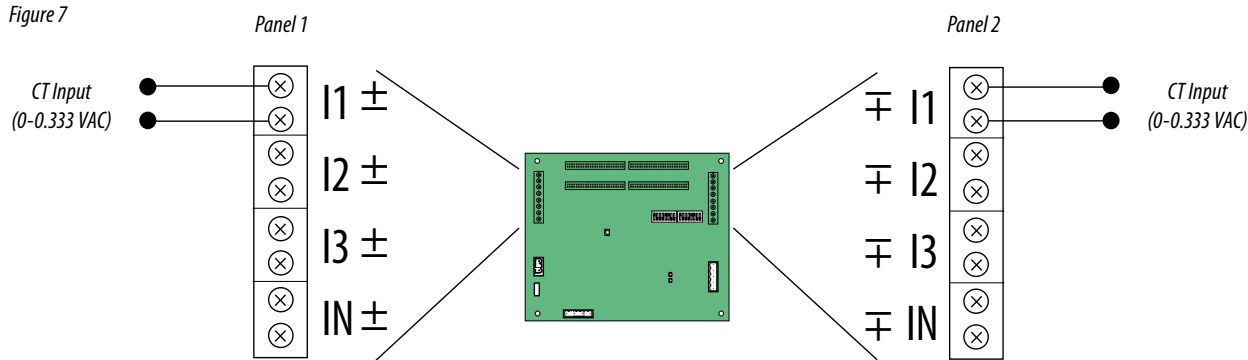
Figure 7


Set up Modbus registers 115-118 for CT scaling.

Use base + 1 address for Panel 2 setup.

Note: (+) represents black, (-) represents white

8. Connect 2-wire 90-277VAC power to main power terminals. Observe polarity. For the E31A and E31B, connect voltage lines to the voltage taps (Figure 8). Equip voltage lines with fuses.

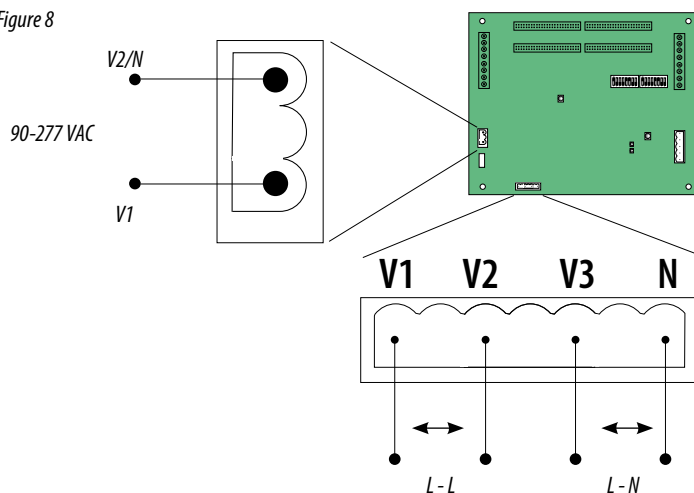Figure 8


Line to Line (L-L) Voltage: 150 to 480 VAC

Line to Neutral (L-N) voltage: 90 to 277 VAC

Voltage taps are shared by both panels.

WIRING



Power must be disconnected and locked out before making any wiring connections.

1. Connect 2-wire or 4-wire Modbus RS-485 daisy chain network (Figures 9 and 10).

Figure 9

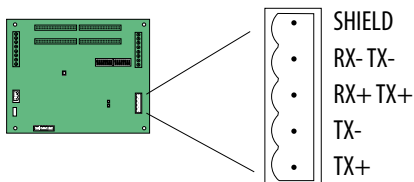


Figure 10

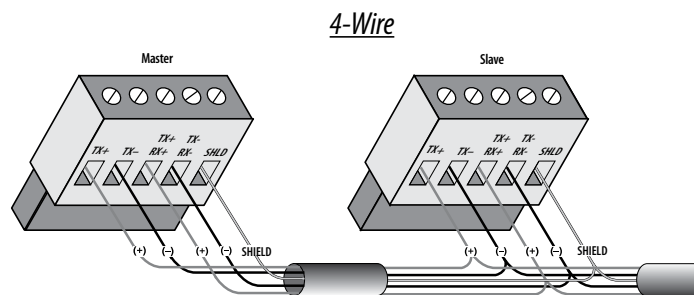
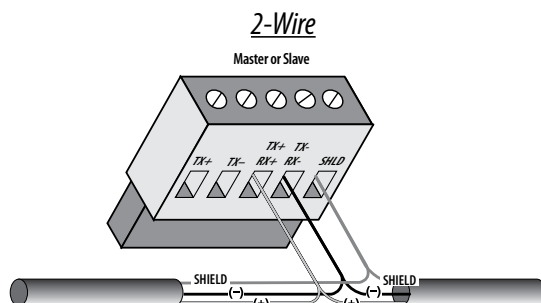


Figure 11

2. Mechanically secure the RS-485 cable where it enters the electrical panel.
3. Connect all RS-485 devices in a daisy-chain fashion, and properly terminate the chain (Figure 11).
4. Shield the RS-485 cable using twisted-pair wire, such as Belden 1120A. The cable must be voltage-rated for the installation.
5. When tightening terminals, ensure that the correct torque is applied: 0.5 to 0.6 N·m (0.37 to 0.44 ft·lb) for connectors on main board, 0.22 to 0.26 N·m (0.16 to 0.19 ft·lb) for connectors on adapter boards (Figure 12).

2-Wire Example


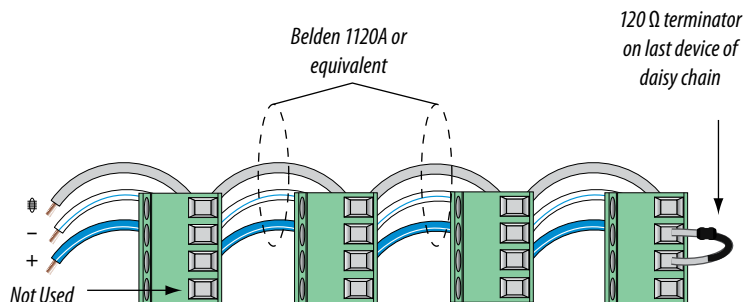


Figure 12

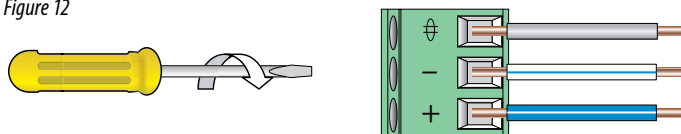


WARNING: After wiring the RS-485 cable, remove all scraps of wire or foil shield from the electrical panel. Wire scraps coming into contact with high voltage conductors could be DANGEROUS!

CONFIGURATION

1. Communications Configuration: Communications parameters for the E31 series are field selectable for your convenience. Please see the Product Diagram section (page 2) for selector location. The following parameters are configurable:

- Baud Rate: 9600, 19200, 38400
- Parity On or Off
- Parity: odd or even
- Wiring: 2 or 4


Example: 2-wire 19200 Baud No Parity

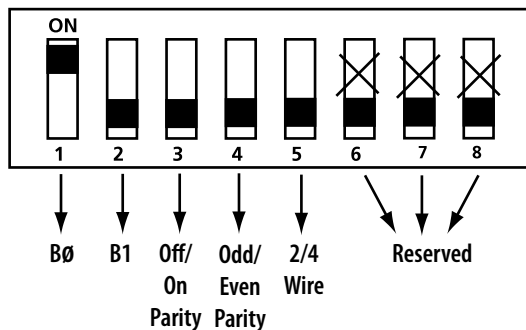

1	2	3	4	5	6	7	8	
off	off				X	X	X	9600
on	off				X	X	X	19200
off	on				X	X	X	38400
on	on				X	X	X	Reserved
		off	off		X	X	X	No Parity
		on	off		X	X	X	Odd Parity
		off	on		X	X	X	No Parity
		on	on		X	X	X	Even Parity
				on	X	X	X	4-wire RS-485
				off	X	X	X	2-wire RS-485


2. Address Configuration: Each Modbus device on a single network must have a unique address. Set the switch block to assign a unique address before the device is connected to the Modbus RS-485 network. If an address is selected that conflicts with another device, neither device will be able to communicate.

3. The E31 uses two logical addresses. Panel 1 uses the base address as set on the DIP switches, and Panel 2 uses this base address + 1. Address the E31 as any whole number between and including 1-246. Each unit is equipped with a set of 8 DIP switches for addressing. See below.

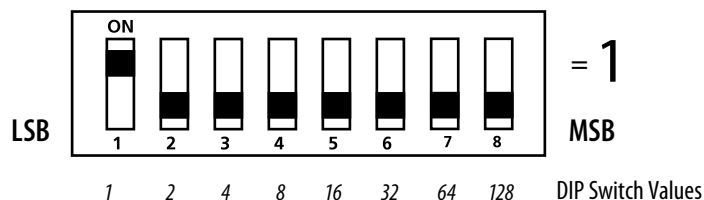

4. To determine an address, simply add the values of any switch that is on.

For example:

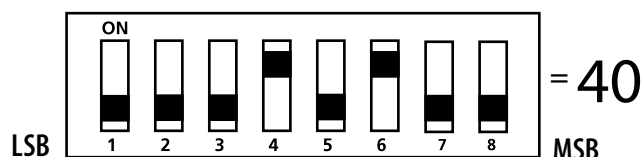


Switch number 4 has an ON Value of 8 and switch number 6 has an ON Value of 32. (8 + 32 = 40). Therefore, the address for Panel 1 is 40, and the address for Panel 2 is 41.

See the Address Setup section (page 9) for a pictorial listing of the first 63 switch positions.

DEFAULT DIP SWITCH SETTINGS







The E31 includes two DIP switches, as shown below. Switches are shown in their default positions.

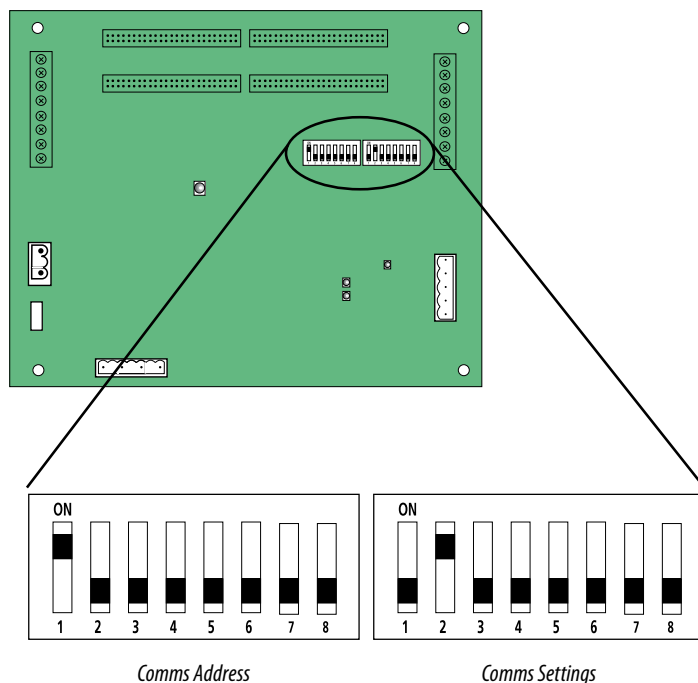

ADDRESS SETUP



DO NOT
USE ZERO

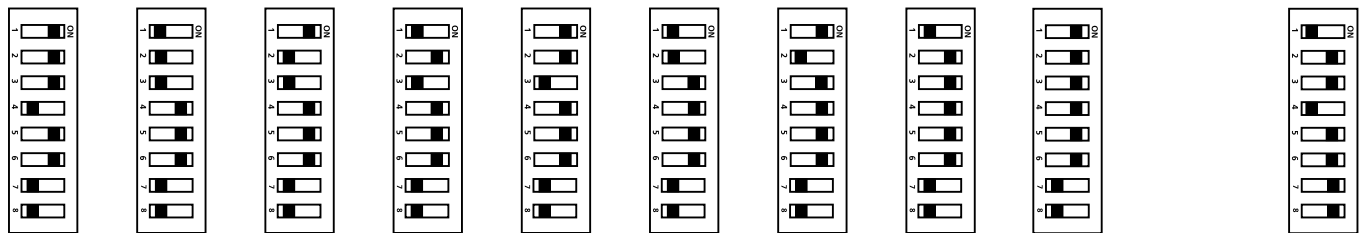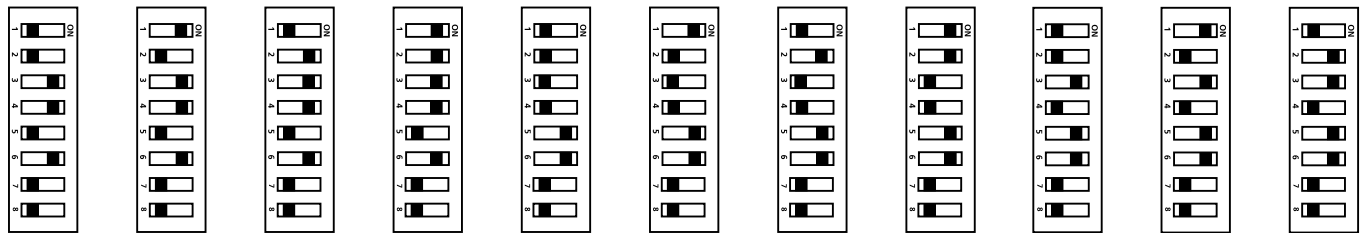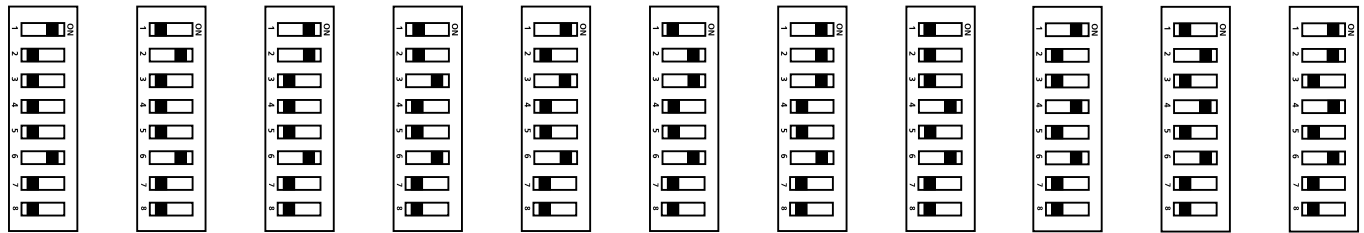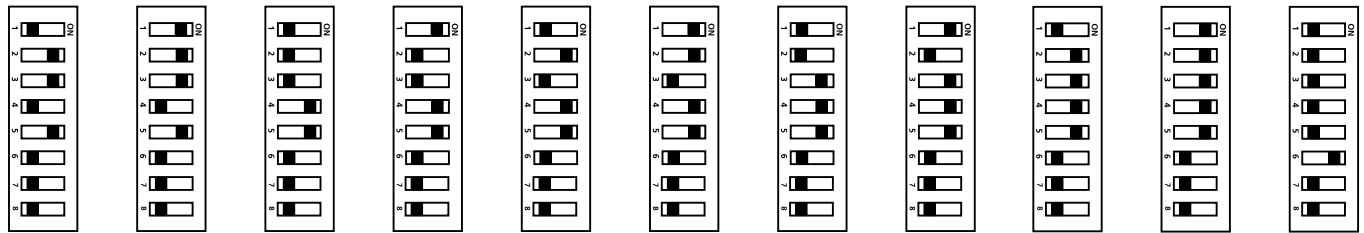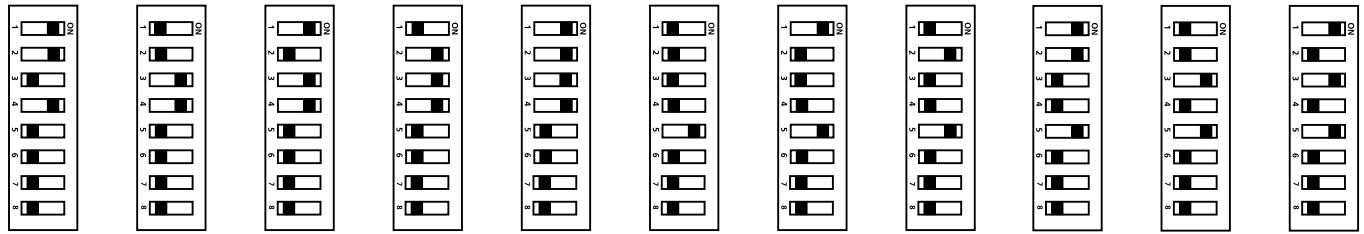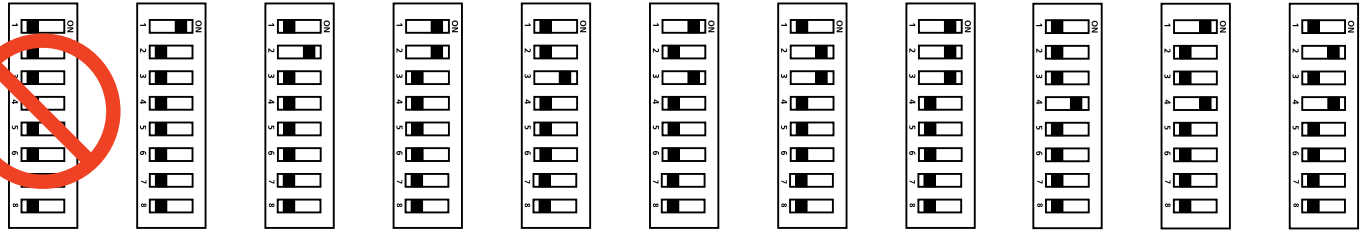

.....

246

COMMISSIONING

1. Reconnect power to the panel.
2. Configure installation mode using Modbus Register 6.
3. Configure CT scaling.
4. Configure alarms.
5. Configure demand.

Download the free E3x configuration tool from www.veris.com to commission the device for operation.

RECOMMENDED ACCESSORIES

Part ID	Description
E31CT0	Six-pack 50 A CT, 6 ft. (1.8 m) lead
E31CT0R20	Six-pack 50 A CT, 20 ft. (6 m) lead
E31CT1	Six-pack 100 A CT, 6 ft. (1.8 m) lead
E31CT1R20	Six-pack 100 A CT, 20 ft. (6 m) lead
E31CT3	Single 200A CT, 6ft (1.8m) lead
E31CT3R20	Single 200A CT, 20ft (6m) lead
E31CTDB	2 E31 Adapter boards
AE001	E3x MCB Cover
AV01	Veris DIN Rail

SAFETY

If Veris E31 products are used in installations with circuits higher than the product ratings, the circuits must be kept segregated per UL508A Sec. 17.5.

Note: 277/480VAC Wye connected (center grounded) power systems operate within the 300VAC line to neutral safety rating of the E3x series, and the operational voltage limit (single-phase connection) as the line to neutral voltage is 277VAC in such power systems. Corner-grounded delta 480VAC systems would not qualify, as the actual line to earth voltage is 480VAC on each leg, exceeding the E3x ratings.

Note: E3x internal circuitry (cables and CTs) are not circuits as defined by UL508A, as they do not extend beyond the E3x itself without further safety/fire isolation.

UL listed under standard 508 as an "open type device."

Maximum ambient air temperature for use is 60°C.


Installation category: CAT III

The E31 Series must be installed in an appropriate electrical and fire enclosure per local regulations.

For use in a Pollution Degree 2 or better environment only.

A Pollution Degree 2 environment must control conductive pollution and the possibility of condensation or high humidity. Consideration must be given to the enclosure, the correct use of ventilation, thermal properties of the equipment and the relationship with the environment.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the device may be impaired.

IEC/EN 61010-1 



This symbol indicates an electrical shock hazard exists.



Documentation must be consulted where this symbol is used on the product.

TROUBLESHOOTING

Problem	Solution
Product is not communicating over Modbus daisy chain	<ul style="list-style-type: none"> Check the unit Modbus address to ensure that each device on the daisy chain has a unique address. Check Parity. Check the communications wiring. Check that the daisy chain is properly terminated.
RX LED is solid	<ul style="list-style-type: none"> Check for reversed polarity on Modbus comms. Check for sufficient biasing on the Modbus bus. Modbus physical specification calls for 450-650 Ω biasing. This is usually provided by the master.
The main board has a fast flashing amber light	<ul style="list-style-type: none"> Verify ribbon cable connectors are inserted in the correct orientation. If cables are correct, reset main board to re-initialize product.
The main board has a slow flashing amber light	<ul style="list-style-type: none"> One or more channels is clipping. This can be caused by a signal greater than the split-core CT size or 277 V L-N, or by a signal with high THD near the gain stage switching points (1.5 A and 10 A).
The main board has a flashing green light	<ul style="list-style-type: none"> Everything is wired properly and the main board has power.
The main board is a flashing or solid red light	<ul style="list-style-type: none"> Light may be red briefly while device powers up. If light is red for more the 60 sec. device has encountered a diagnostic event. Contact technical support.
Split-core product is reading zero for some values	<ul style="list-style-type: none"> Device was unable to read split-core adapter boards on power up. Verify adapter boards are connected. Verify ribbon cable connectors are inserted in the correct orientation. Reset main board to re-initialize product.
Power factor reading is not as expected	<ul style="list-style-type: none"> Verify voltage taps are connected in appropriate phase rotation. Verify phase rotation of breakers (firmware rev. 1.012 or higher allows for custom rotation if needed).
Current reading is not as expected, or reading is on different CT number than expected	<ul style="list-style-type: none"> Verify ribbon cable is fully seated and in the correct orientation.
Current is reading zero, even when small currents are still flowing through circuit	<ul style="list-style-type: none"> The product cuts off at 50 mA, and will set the reporting register to 0 mA for currents near or below this range.
E3x Config Tool returns Modbus error on read/write	<ul style="list-style-type: none"> Verify using the latest release of E3x Config Tool as older versions may not support all features in current product firmware. Latest version is available on our website http://www.veris.com/modbus.aspx

CHINA ROHS COMPLIANCE INFORMATION (EFUP TABLE)

部件名称	产品中有毒有害物质或元素的名称及含量Substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电子线路板	X	0	0	0	0	0
0 = 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。 X = 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。						
Z000057-0A						